

BUNN® Thermal Server Cleaning Instructions

Clean once per month or as needed



1. Open the server by turning the cover counterclockwise.



2. Disassemble the cover by removing the coffee inlet and outlet retainers and balls and the air vent retainer and ball, by turning counterclockwise.



3. Turn the server upside down and place it on a solid, flat surface. Remove the two screws on the bottom cover and remove the cover.



4. Hold the dispenser valve with both hands and pull it out, disconnecting it from the rubber tube.



5. Completely wash all parts using a mild detergent and rinse thoroughly. Reassemble in reverse order.



6. Remove the sight gauge cover by lifting up and out.



7. Disconnect the sight gauge tube from the transparent elbow and remove the tube by lifting up and out.



8. Insert the cleaning brush (#26367.0000) using a mild detergent into the tube and clean.



9. Clean all other surfaces with a damp disposable paper towel using a mild detergent and rinse thoroughly. NOTE - DO NOT immerse the body of the Thermal Server in water nor clean in a dish washing machine.